



Sidekick **SCENE KEYPAD**

Quick Start Guide



Configure button taps, double-taps, and hold triggers in your home automation system with Sidekick Scene Keypad and Bond Bridge Pro.

Sidekick Scene Keypad is highly flexible, supporting four different configurations based on how many scene keys you need, and whether you want to control any shade channels directly.

How to set up/change modes

- 1) Select the mode that you want to use.
- 2) Enter the Menu Code.*
- 3) All LEDs will blink to confirm.
- 4) Install the 3- or 6-button set if required.

**If you want to use the 3-button set, enter the Menu Code before changing the button set. • Menu (on the back) difficult to use when the 3-button set is installed.*



8-Scene Mode

You can set up to 8 scenes and even use the Up and Down buttons to control dimmer lights, volume, temperature, or whatever your imagination leads you!



6-Scene Mode

For those instances where you don't need Up and Down buttons. Set up to 6 scenes.




3-Scene Mode

The simplest of them all, specially useful in A/V installations such as home theaters.



Mixed Mode (5 Scenes, 1 Shade)

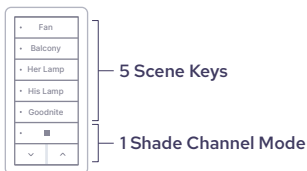

In this mode, the 5 numbered buttons are used for scenes, while the Stop, Up, Down, and Pair buttons act as a single-channel remote that directly controls your shade motor.



After setting Sidekick to Mixed Mode, see the manual for your shade technology for details on how to pair to your shade motor.

NOTE: If you wish to change the motor technology while in Mixed Mode, please be sure to prefix the technology code with a "1". Failure to do so will result in the Sidekick reverting to 5-channel shade mode.